

# Mounting instructions Hardtop Boxster 986


Step 1. First remove the original trunk lid, coverplate and brakelight from the Boxster



Step 2. Screw the mounting pin on the inside of the hardtop with M8 bolts



Step 3. Unscrew the hook from the softtop and mount this on the hardtop with M6 bolts

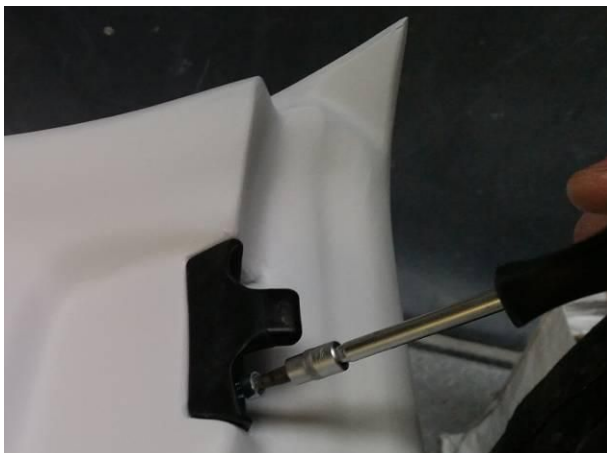

Step 4. Screw the mounting bracket at the inside of the hardtop



Step 5. Put the hardtop on the car

Step 6. Mount the adjustment screws, the original Boxster bootlock and hinges on the Cayman trunk lid



Step 7. Mount the trunklid on the hardtop



Step 8. Fix the joints for the trunklid lifter on the hardtop and the trunk lid



Step 9. Mount the trunklid lifter and fix it with the secure pins



Step 10. Fix the rubber between the trunklid and the hardtop



Step 11. Lead the cables for the windowheating and brakelight trough the pipe in the hardtop



Step 12. Make sure al the body gaps are ok, check the fitment of the windows and prepare for painting. After the painting you can glue the windows and the rubbers

Step 13. Glue the sidescreen rubber on the hardtop



Step 13. Glue the small rubber between the hardtop and front window. Make sure the rubber is not higher than the hardtop or window



Step 14. Glue the windows



Step 15. In case the boardcomputer gives a failure sign about the softtop you can take out the relay of the movable roof to be sure the softtop can not be operated while the hardtop is mounted on the car.

The relaybox is located in the drivers footwell near the pedals



You have to take out the double relay, wich is for the roof



Step 16. Have fun of your car!