

- R-9071 Driver=s side mounting kit - FOR SPARCO EVO/PRO 2000 SEATS
- R-9072 Passenger=s side mounting kit - FOR SPARCO EVO/PRO 2000 SEATS
- R-9073 Driver=s side mounting kit - FOR SPARCO EVO 2 SEATS
- R-9074 Passenger=s side mounting kit - FOR SPARCO EVO 2 SEATS
- R-9075 Driver=s side mounting kit - FOR RECARO POLE POSITION SEATS
- R-9076 Passenger=s side mounting kit - FOR RECARO POLE POSITION SEATS
- R-9078 Passenger=s side mounting kit - FOR GT3 SEATS
- R-9079 Driver=s side mounting kit - FOR GT3 SEATS
- R-9751 Driver Side mounting kit – for OMP HTE SEATS
- R-9752 Passenger Side mounting Kit - for OMP HTE SEATS
- R-9755 Driver Side mounting kit – for Recaro SPG
- R-9756 Passenger Side mounting kit – for Recaro SPG
- R-9761 Driver side mounting kit – FOR SPARCO EVO 2 PLUS SEATS
- R-9762 Passenger side mounting kit – FOR SPARCO EVO 2 PLUS

**INSTALLATION INSTRUCTIONS: SIDE MOUNT BRACKETS FOR SPARCO/RECARO SEATS TO FACTORY 996/BOXSTER SLIDERS**

Brey-Krause R-9071 & R-9072 side mount brackets adapt Sparco Evo/Pro 2000 seats to 996/Boxster sliders. Brey-Krause R-9073 & R-9074 side mount brackets adapt Sparco Evo 2 seats to 996/Boxster sliders. R-9075 & R-9076 side mount brackets adapt Recaro Pole position seats to 996/Boxster sliders. We provide an inside (tunnel side) seat belt mounting point designed for an off road seat belt only. Not for street use.

Step 1.



Raise seat bottom to its highest position.

Step 2.


Remove (4) mounting bolts that attach the seat to the vehicle. Installation tip: *You can use a 10 mm. Six point socket to remove the bolts that fasten the seat to the floor.* Tip the seat back and carefully unplug all wiring to the seat before attempting to remove the seat from the vehicle.

Step 3. Carefully remove the seat from the vehicle.

Step 4. Remove sliders from the seat by removing (2) fasteners at the front of each slider and (2) fasteners at the rear of each slider. (The rear fasteners require a torx T-40 allen key for removal.) Note the position of the fore/aft-adjusting rail relative to the sliders for reassembly.

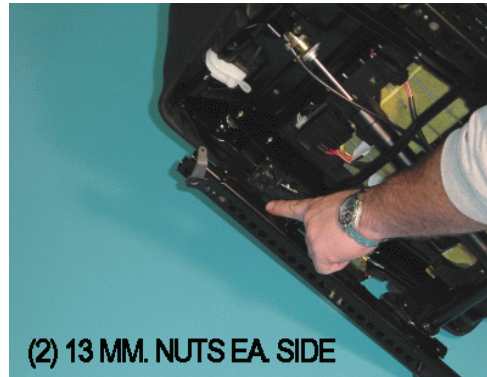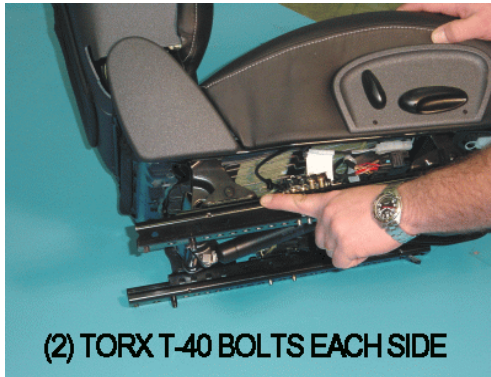

Step 5. Attach the Brey-Krause side mounts to the sliders as shown using factory hardware. (Removable Loctite is recommended). **If also installing Brey-Krause R-9030 anti-submarine strap, begin installation now.**

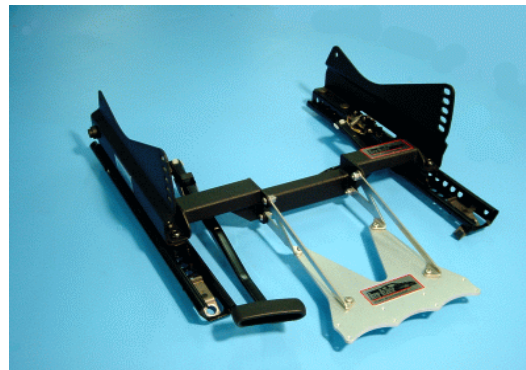

Step 6. Check all fasteners, attach seat to slider/side mount assembly before installing into the vehicle.

Performance driving events are by nature potentially hazardous to your health. Brey-Krause Mfg. Co. Inc. shall not be liable for injury, consequential, or other types of damages resulting from the use or misuse of our products. Proper installation of these parts is critical and should only be done by a professional shop.