

EUROWISE MACAN LIGHT BAR

INSTALLATION GUIDE



INSTALLATION INSTRUCTIONS

Always practice safe procedures when working under the vehicle!

Use jack stands at all times!

Professional installation highly suggested!

DISCLAIMER

This installation guide is provided for informational purposes only. We are not responsible for any damages or injuries resulting from improper installation or use of this product. It is essential to follow all safety guidelines and maintain safe installation habits. We strongly recommend that you consult with or hire a professional installer to ensure proper installation. Use this guide at your own risk.




Remove front fender liner hardware. (t20/t25)






Remove under tray cover. (t20's)

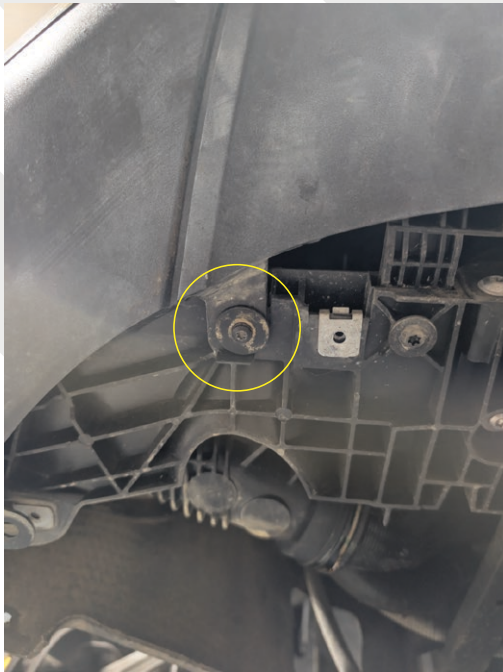

Remove the t30's holding the front of the bumper




Remove the remaining t30's that's holding the bumper

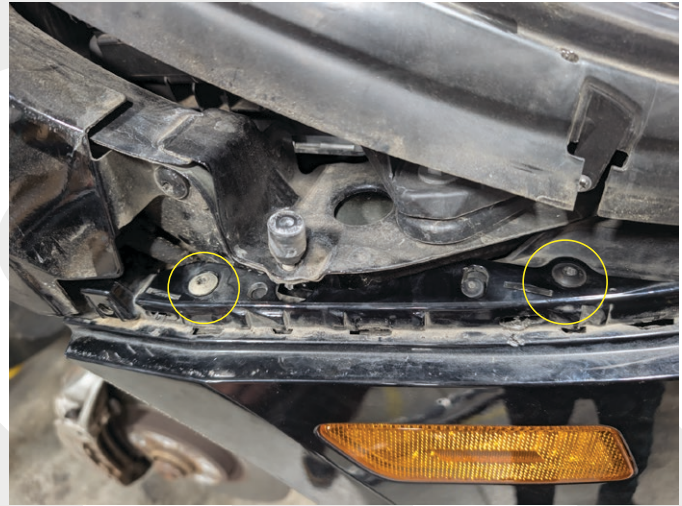


Remove t25's/t20's holding the side of the bumper to the mounts. T20 is hidden as shown



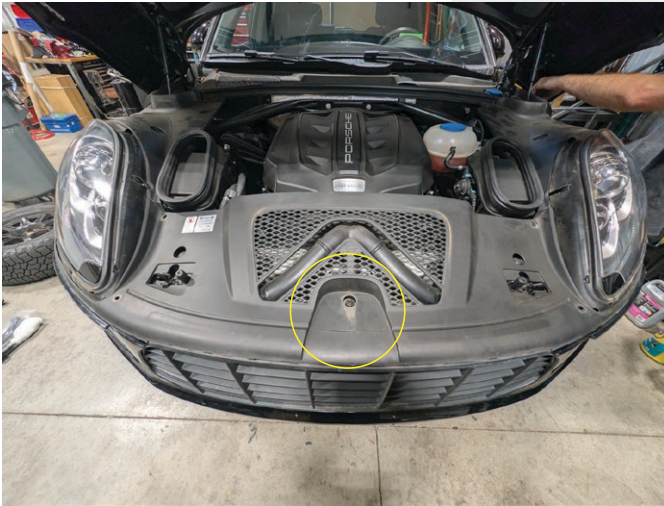


To remove the engine cover - Start by removing the hood release by just prying this tiny clip out with the pry tool

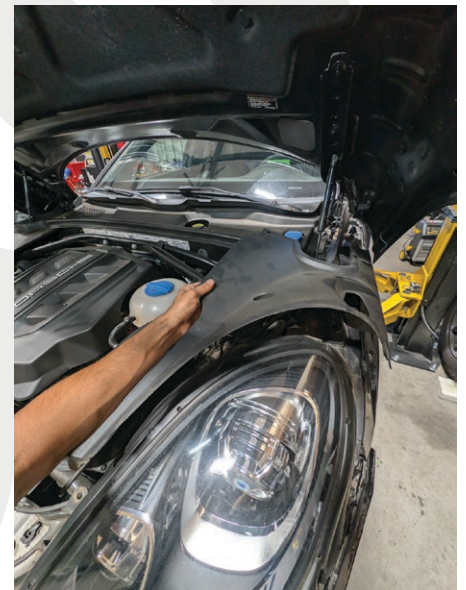

Start by removing the engine compartment covers (two piece clips)



Pulling the fender liner back reveals two more screws holding the side of the bumper on each side (t25's)

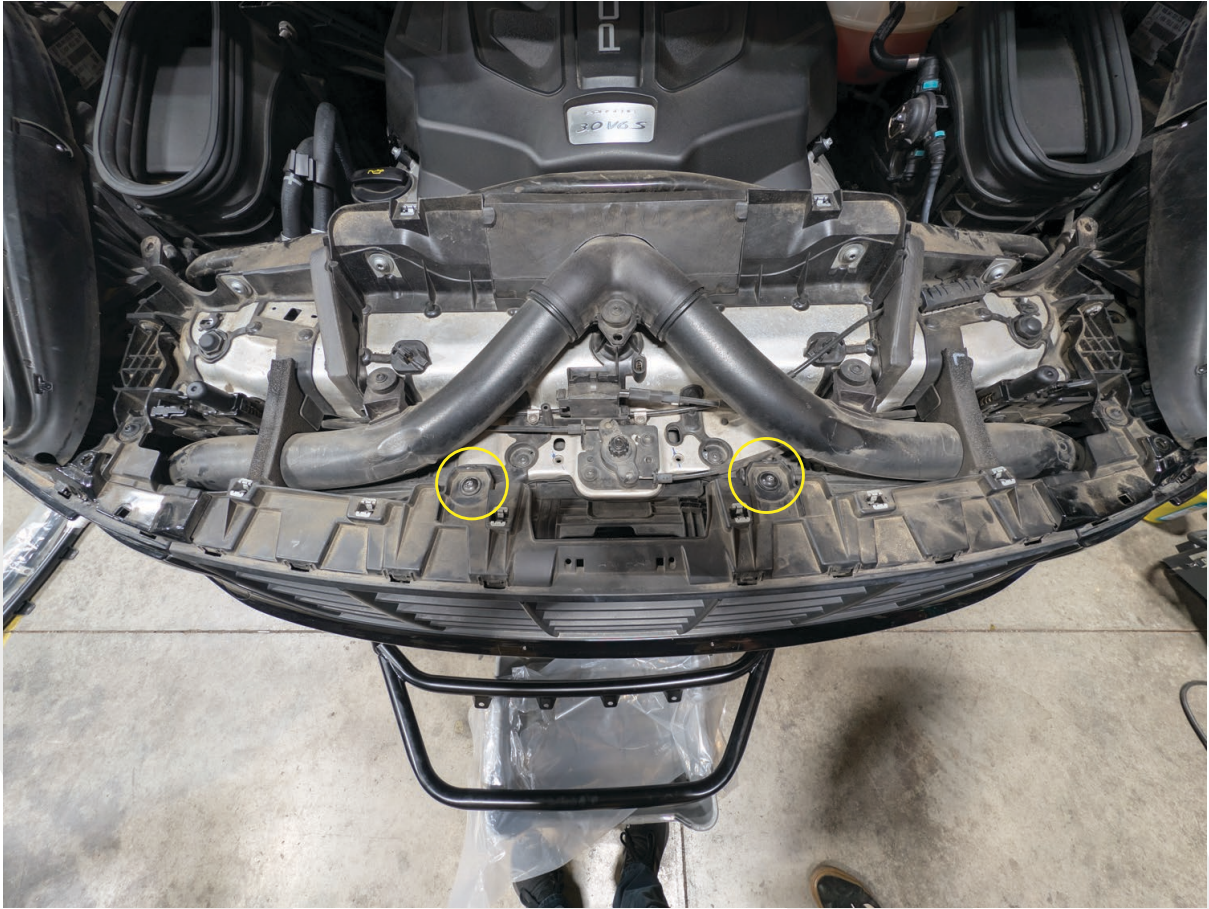

Remove the remaining t30's on the top of the bumper and the bumper itself



Two connectors for the bumper harness needs to be unplugged



Some clearancing may be required



On the passenger side, this sensor needs to be rotated into this position and loosen with a 10mm



Image of the parts to be installed



Remove factory crash bar bolts



Reinstall with the supplied hardware in this orientation



Pull forward on these flaps that are held on by clips and remove for trimming



Cut these in half for full clearance



Image of the trim reinstalled. Reverse steps to put everything back together.



Image with the finished product